



RADON TEST KIT

Instructions



IMPORTANT:
Save the box and
foil bag to mail
the test kit back
to the lab.

www.HomeRadonTest.ca

The alpha track detector in this kit is analyzed by SRC Environmental Analytical Laboratories, an independent laboratory accredited by the Canadian Association of Laboratory Accreditation and certified by the Canadian National Radon Proficiency Program.



CALA
Testing
Accreditation No. A2472



BEGIN YOUR TEST

Please read through all the instructions before starting your test. Remember to save the box and the resealable foil bag that came with your kit.

1. Select your location based on the placement guide.
2. The detector does not require batteries or lid removal. Open the envelope and remove the detector. The detector is now on. Place the detector in location.
3. Register your radon detector and start date online at www.HomeRadonTest.ca. The detector number is located on the foil bag and on top of the detector.
4. Return your detector to the lab in 3 months (90 days).



A minimum testing period of 3 months is recommended for your test, but can be extended up to 12 months. The ideal time to test your home is during the winter months (September to March), when windows and doors are most often closed.

LOCATION: PLACEMENT GUIDE

Health Canada's guidelines indicate that measurements are best made in the *lowest lived-in level* of a home.

This space should be occupied for at least four hours per day.



RADON TEST KIT

BEST LOCATIONS: BASEMENT OR MAIN FLOOR BEDROOM, LIVING ROOM, OFFICE OR FAMILY ROOM


Test results can be affected by:

- Humidity (bathroom, kitchen)
- Ventilation/exhaust (sump, laundry, garage)
- Heat (baseboard heaters, electronics or direct sunlight)

APPROXIMATE DETECTOR PLACEMENT

- 1 metre (3 feet) from any exterior doors or windows
- 0.5 metre (2 feet) from exterior walls
- 1 metre (3 feet) off the floor

DO NOT
place your detector
in or near a
bathroom, kitchen,
closet, laundry/
mechanical room
or garage.

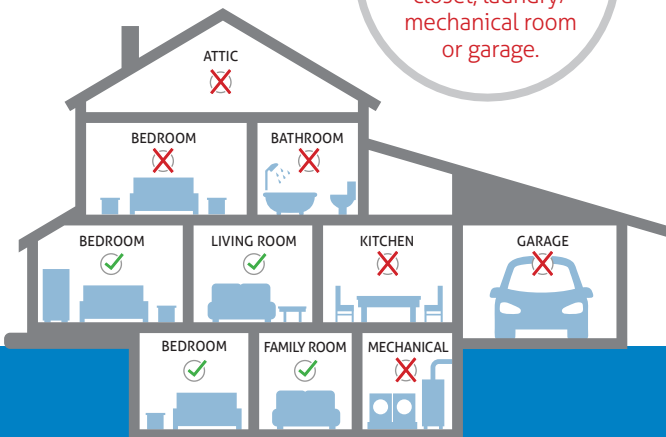

SUBMIT YOUR TEST


1 To receive your radon results, you must enter the **start and end date** for your test online at www.HomeRadonTest.ca



2 Seal your detector in the resealable foil bag provided. Place the foil bag in the original shipping box.



3 Place the postage sticker on top of the box and seal the box with heavy-duty tape.

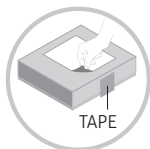

4 Drop in a Canada Post mailbox or return to the post office **as soon as possible**.



Results will be emailed to the address specified in the online registration form.

After you receive your results: If your results are above the Health Canada limits, go to:

<https://c-nrpp.ca/find-a-professional/> to find a Certified Radon Mitigation Professional in your area.

Contact Us: Our experts are here to help and answer any questions you have about your radon test.

radon@sk.lung.ca

